



Point of Sale

On-site Hardware Setup Guide

Contents List (Boxed by Lane)



Box 1 - Point of Sale Terminal

- Elo Z30 Android POS System



Box 2 - Barcode Scanner

- Zebra Barcode Reader
- Scanner USB Cable



Box 3 - Receipt Printer

- Receipt Printer
- Printer Power Adapter
- Printer USB Cable



Box 4 - Mini Keyboard with 10 key

- Mini Keyboard with 10 key



Box 5 - Customer Facing Display Bundle (if applicable)

- Elo 1002L 10.1" Touchscreen Monitor
- Elo Z10 Stand
- USB-C Video Cable

Items Needed

- Phillips-Head Screwdriver
- Ethernet Cable (Wired Internet Connection)
- Receipt Paper for Printer

Box Components

Your Point of Sale box will contain all components for one (1) Point of Sale Lane (except Cash Drawer, sent separately).

NOTE: Set up the Point of Sale where the Lane will be used.

 


To avoid confusion:


- If setting up more than one (1) Point of Sale Lane, keep lane components together. **Open and set up each lane separately.** The boxes will be marked by Lane# and components are configured to function only on assigned Lane#.

Step 1 – Point of Sale Lane Terminal

1. **Open Box 1** and remove the POS Terminal.
2. Gently lean terminal back and lay it down.
3. **Remove** the screw and cable cover to access the I/O connections. (Keep the screw separate to replace after peripherals are all connected.)

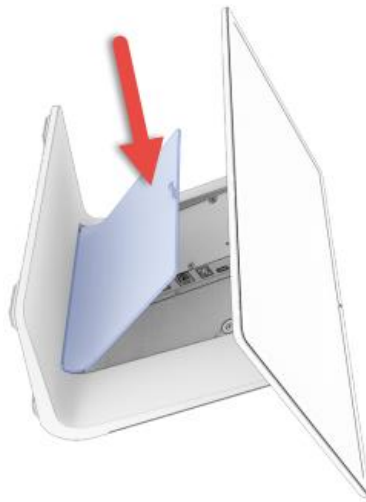

 4. **Route** the **power cable** and **internet cable** through the hole in the bottom of the stand and connect as shown.

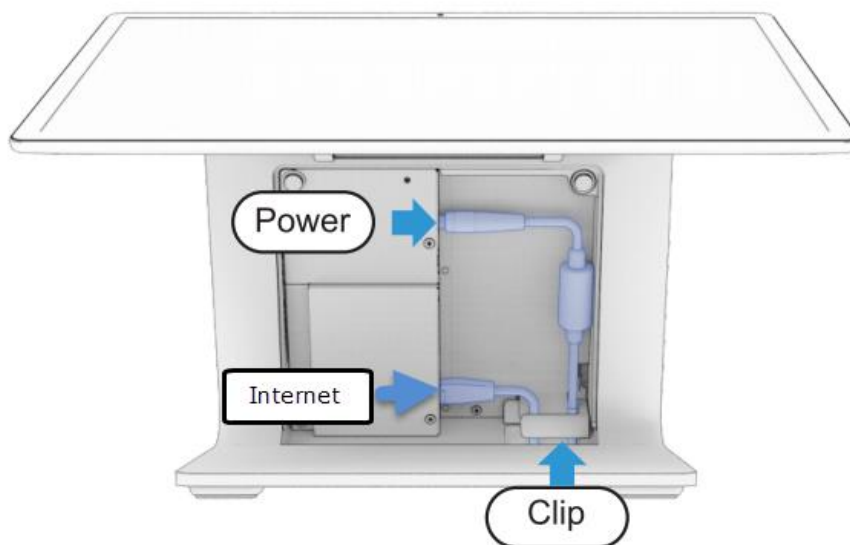


Step 2 – Connecting Barcode Scanner

1. **Open Box 2** and remove Scanner and Scanner Cable.



2. **Plug** scanner cable into the back of the Scanner.

 3. **Route** the scanner USB cable through the hole in the bottom of the stand and connect as shown.

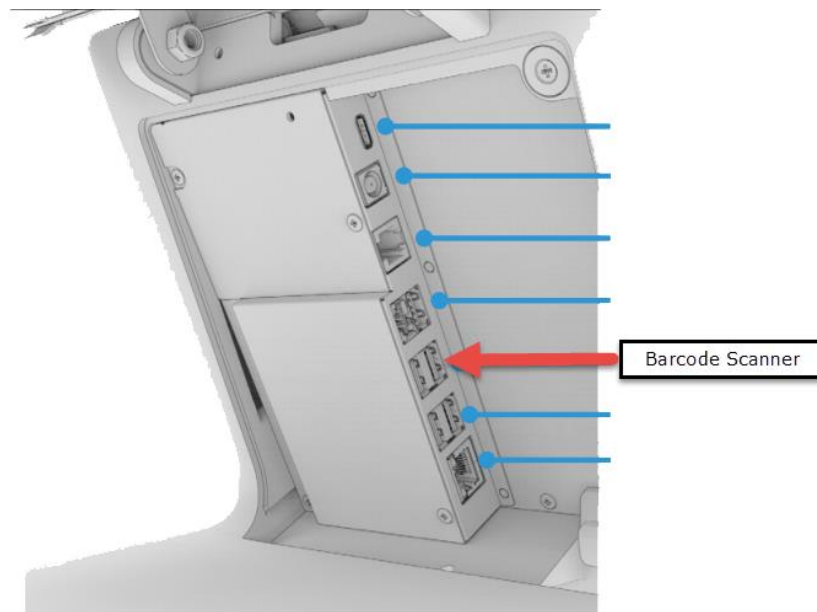

Step 3 – Connecting Receipt Printer

1. **Open Box 3** and remove USB Cable (Type A to B connections), Receipt Printer and Printer Power Adapter.



2. **Install receipt paper** (not included) into the Printer.

 
NOTE: printer can print receipts from **Top** or **Front**, see enclosed Epson instructions to switch configuration.



3. **Remove** bottom cover.

4. **Plug** Printer Power Adapter and USB Cable (Type B) into the Receipt Printer as shown.

5. **Route** the printer USB (Type A) cable through the hole in the bottom of the stand and connect as shown.

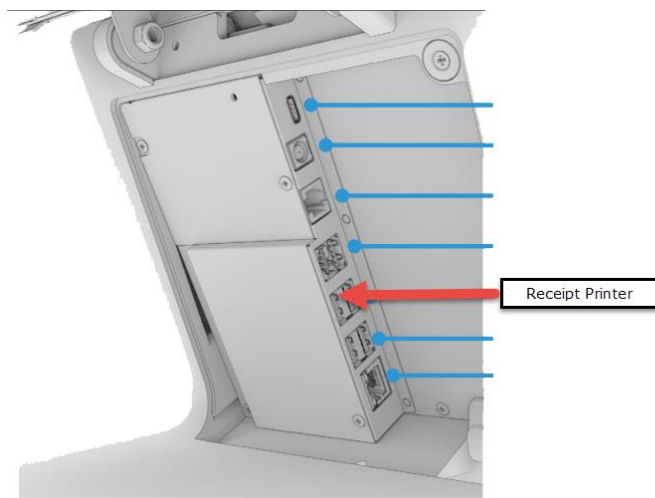


Step 4 – Connecting Mini Keyboard

1. **Open Box 4** and remove Mini Keyboard.




 2. **Route** the keyboard USB cable through the hole in the bottom of the stand and connect as shown.

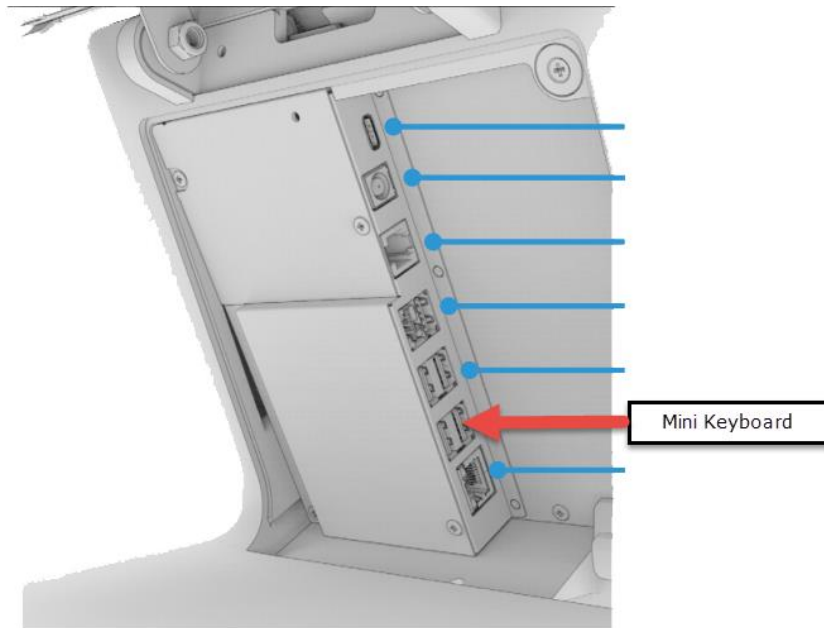


Step 5 – Connecting Customer Facing Display (If applicable)

 1. **Open Box 5** and remove Customer Facing Display.
2. **Route** the USB-C cable through the hole in the bottom of the stand and connect as shown.

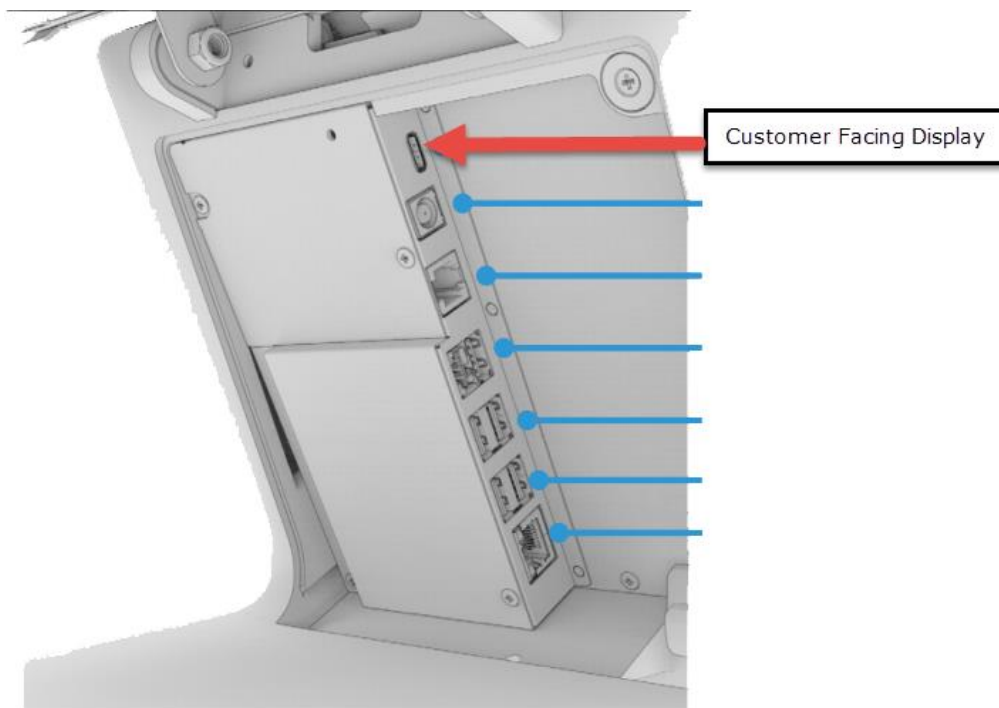


Step 6 – Connecting Cash Drawer

 1. **Open Cash Drawer box** and Cable (labeled “Cash Drawer” and “Printer” on each end connector).
2. **Plug** cable (labeled “Cash Drawer”) into the bottom of the Cash Drawer.

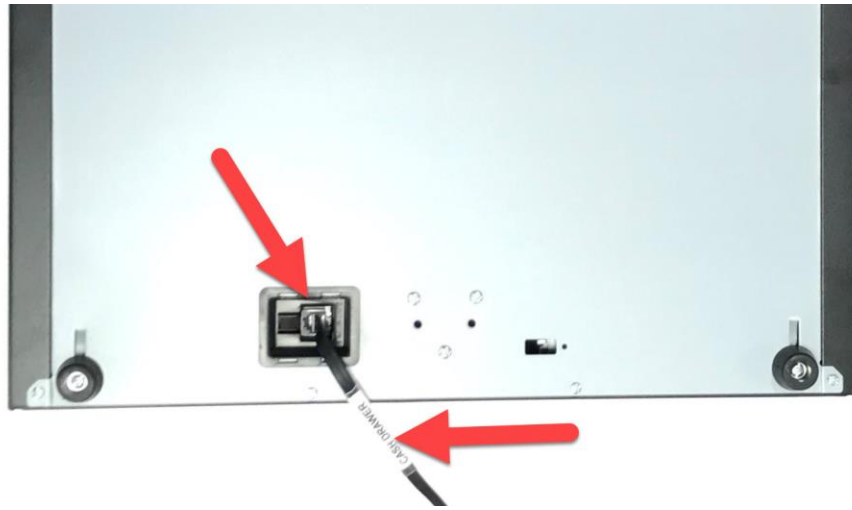


 3. **Plug** cable (labeled “Printer”) into the bottom of the **Receipt Printer**.

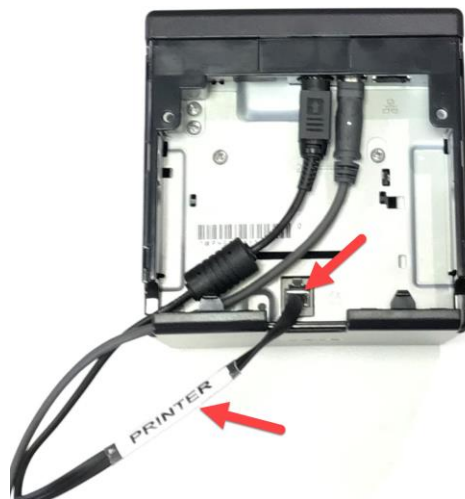

Step 7 – Close Cable Cover and Power Up

 1. **Replace** cable cover door and secure with screw.

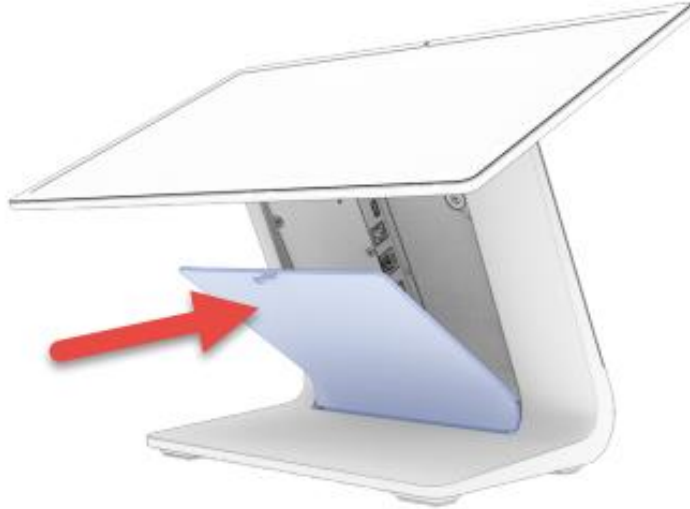

2. **Plug Point of Sale Power Supply Adapter and Receipt Printer Power Supply Adapter into an **electrical receptacle**.**
(Recommended: Surge Protector and/or Battery Backup)
3. **Set upright** the Point of Sale and **arrange** peripherals.
4. **Power on** Point of Sale found on back middle of the Touchscreen and **Power on** Receipt Printer.

We are here to help!

Any questions, please call us at 1-866-673-3736 opt 2, or email us at support@OrderDog.com