


Z30 Scanner Control Panel Configuration Barcodes

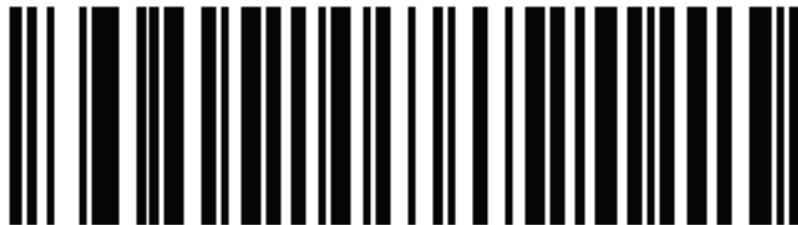

1. Com Protocol = SNAP!



2. Enable Scale Display Configuration (1)

Additional Z30 Scanner Configuration Barcodes (1/2)



3. Off (3)



4. Medium Volume (1)



5. Convert UPC-E to UPC-A (Enable) (1)


Additional Z30 Scanner Configuration Barcodes (2/2)



6. Enable UPC-E (1)



7. Enable UPC-A (1)

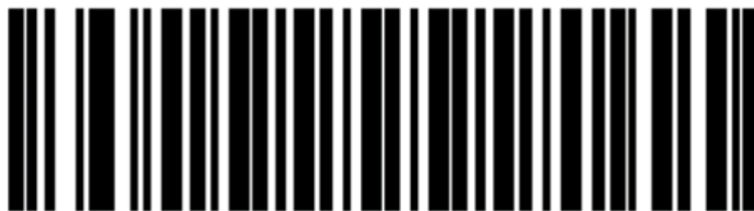

8. Enable Code 39